



Thank you for purchasing the de Lisle Amp-Speaker Selector V2! Please read this manual before using it.

WARNINGS:

- This device is not designed to be switched under signal conditions.
- Protective loads are included as a precaution. Unused amps should be powered off or on standby.
- Do not connect amplifier outputs to the "Speakers" jacks or speakers to the "Amplifiers" jacks.

CONNECTIONS:

The rear panel includes eight 1/4" mono jacks. Use the four jacks on the left in the "Speakers" block to connect your speaker cabinets. Connect your amps' speaker outputs to the jacks under in "Amplifiers" block. Routing occurs on the "Speakers" block, and the "Amplifiers" jacks are isolated from each other. Do not reverse these connections or you could damage your gear.



SWITCHING:

The four switches on the front panel route the corresponding speaker jack to an amplifier. For example, if the "Speaker 1" knob is set to the "2" position, the cabinet connected to jack "1" in the "Speakers" block would be routed to the amp connected to jack "2" in the "Amplifiers" block. If two cabinets are routed to the same amplifier, they will be connected in parallel. Set the knob to the "0" position if you do not want to connect that particular cabinet to an amplifier.



Pick up our ABC pedal for easier switching on the front end!
<http://www.delisleguitar.com/index.php/pedals#ABC>